

AVANT GUARD

SMART HOME

D1 New Smart Lock

Complete User Settings Guide

HOW TO ENTER SETTINGS MODE

STEP 1	STEP 2	STEP 3
*#	123456	MENU
<i>In the initial state, press * key and # key to wake the lock</i>	<i>Enter Admin Password (default: 123456). A beep confirms acceptance.</i>	<i>You are now in Settings Mode. Use number keys to navigate menus.</i>

Registration Notes:

- 1) Fingerprint registration: Scan 5 times
- 2) Password registration: 6-8 digits
- 3) First time setting: Press * # then Enter 123456# then Add new admin

MAIN MENU

KEY	FUNCTION	DESCRIPTION
1	Admin Setup	Manage administrator accounts — add/delete admin credentials and factory reset.
2	User Setup	Manage regular user accounts — add/delete regular user credentials.
3	System Setup	Configure lock behaviour — verification mode, volume, open mode, door lock function, anti-pry.
4	Wireless Setup	Join or exit Wi-Fi / IoT network for smart connectivity.

1 ADMIN SETUP — Administrator Management

Admin accounts have full control over lock settings. There should always be at least one admin registered.

OPTION	STEPS	NOTES
--------	-------	-------

1 — Add Admin	Choose credential: • Add Key: Enter 6-8 digit password (twice) • Scan Fingerprint: 6 scans • Scan Card: Hold card to reader	Password must be 6-8 digits. Fingerprint requires 6 scans for accuracy.
2 — Delete Admin	• Delete Password: Press # to confirm, * to return • Delete Fingerprint: Press # to confirm, * to return • Delete Card: Press # to confirm, * to return	Select credential type to delete. Confirm with # or cancel with *.
3 — Factory Reset	Press # to confirm. Press * to cancel and return.	Warning: Deletes ALL users and settings.

2 USER SETUP — Regular User Management

Regular users can unlock the door but cannot access settings.

OPTION	STEPS	NOTES
1 — Add Regular User	Choose credential: • Add Key: Enter 6-8 digit password • Scan Fingerprint: 6 scans • Scan Card: Hold card to reader	Password must be 6-8 digits entered twice to confirm.
2 — Delete Regular User	• Delete Password: Press # to confirm, * to return • Delete Fingerprint: Press # to confirm, * to return • Delete Card: Press # to confirm, * to return	Select credential type, confirm with #.

3 SYSTEM SETUP — Lock Configuration

SETTING	OPTIONS	DESCRIPTION
1 — Verification Mode	1 = Double Unlocking Mode 2 = Single Unlocking Mode	Double mode requires two credentials (e.g., fingerprint + PIN). Single requires one.
2 — Volume Adjustment	1 = Low Volume 2 = Medium Volume 3 = High Volume	Set the volume of beeps and voice prompts.
3 — Normally Open Mode	1 = Turn On 2 = Turn Off	When ON, lock remains unlocked (passage mode). Useful for high-traffic periods.
4 — Door Lock Function (Anti-Pry)	Press 2 to toggle Anti-Prying Detection On/Off	Anti-prying alarm triggers if someone tries to force the door open.

4 WIRELESS SETUP — Network Connection

OPTION	DESCRIPTION
1 — Join Network	Connect the lock to a Wi-Fi network for remote access. Follow app pairing instructions after selecting.
2 — Exit Network	Disconnect the lock from the current Wi-Fi network.

MANUAL FACTORY RESET (Physical Button)

When to use: If you are locked out and cannot access the menu.

Steps:

1. Open the battery cover at the back of the lock.
2. Locate the small reset button inside.
3. Press with a pin until you hear a voice prompt confirming the reset.

Warning: All users and settings will be erased.

QUICK TIPS

Default admin password: 123456. Change this immediately after first setup for security.

Fingerprint tip: Scan 6 times during registration, slightly repositioning your finger each time for best recognition.

Go back anytime: Press * at any step to return to the previous menu — nothing changes until confirmed.

Anti-pry alarm: If triggered accidentally, enter your password or fingerprint to silence it.

Double Unlocking Mode: For extra security, enable Double Unlocking Mode so both credentials must be presented to open the door.