

AVANT GUARD

SMART HOME

D10 Smart Lock

Complete User Settings Guide

HOW TO ENTER ADMIN SETTINGS

STEP 1 *# Press *# on the keypad to wake the lock and enter settings	STEP 2 Admin PW Enter your Admin Password to authenticate. A beep confirms.	STEP 3 MENU You are now in Admin Settings. Use number keys to navigate.
--	---	---

MAIN MENU — ADMIN SETTING

KEY	FUNCTION	DESCRIPTION
1	Add User	Register a new user with fingerprint, access card, or password.
2	Delete User	Remove an existing user's credentials from the lock.
3	Lock Setting	Configure function settings, volume, and language.
4	Add Admin	Register a new administrator with fingerprint, card, or password.

1 ADD USER — Register New Access

Add a new user who can unlock the door. Choose from three credential types.

CREDENTIAL	HOW TO REGISTER
Scan Fingerprint	Place your finger on the sensor multiple times as prompted. The lock will beep when complete.
Scan Card	Hold the access card against the card reader area until the lock beeps to confirm.

Enter Password + #	Type your desired password on the keypad and press # to confirm. Password must meet the length requirement.
---------------------------	---

2 DELETE USER — Remove Access

Remove a specific user's credentials from the lock. Choose the credential type you want to delete.

DELETE METHOD	STEPS
Scan Fingerprint to Delete	Place the registered finger on the sensor. Confirm deletion when prompted.
Scan Card to Delete	Hold the registered card to the reader. Confirm deletion when prompted.
Enter Password to Delete + #	Type the registered password and press # to confirm deletion.
Enter ID to Delete + #	Enter the user's ID number directly and press # to remove them.

3 LOCK SETTING — Configure Your Lock

Adjust how the lock functions day-to-day. Three sub-settings are available.

SETTING	OPTIONS	DESCRIPTION
1 — Function Settings	• Enable / Disable Passage Mode • Enable / Disable Dual Verify • Enable / Disable Anti Burglar Alarm • Enable / Disable Mute	Passage Mode: Lock stays unlocked (free passage). Dual Verify: Requires two credentials to unlock. Anti Burglar Alarm: Triggers alert if forced. Mute: Silences all beeps and voice prompts.
2 — Volume Settings	• Volume Up • Volume Down	Adjust the lock's beep and voice prompt volume level.
3 — Language Settings	• Chinese • English	Select the language for voice prompts and display messages.
4 — Time Setting	Enter New Date and Time	Set the lock's internal clock. Important for access logs and time-based credentials.

4 ADD ADMIN — Register Administrator

Add an additional administrator who can access the settings menu and manage users.

CREDENTIAL	HOW TO REGISTER
Scan Fingerprint	Place your finger on the sensor multiple times as prompted.
Scan Card	Hold the access card against the card reader until the lock beeps.

Enter Password + #

Type the desired admin password and press # to confirm.

LOCK RESET — Physical Button Reset

Lock Reset:

1. Open the back cover of the lock.
2. Press and HOLD the reset button for 6 seconds.
3. Release when you hear the confirmation — reset is Successful.

Warning: All users and settings will be permanently erased.

Wi-Fi SETUP

ACTION	STEPS	RESULT
Wi-Fi Setting (First Time)	Open the back cover. Press the reset button ONCE (do not hold).	Lock enters Wi-Fi pairing mode. Open the Smartlife App to add the device.
Wi-Fi Change (Master Reset)	Perform Wi-Fi Setting (First Time) again to reconnect to a new network.	Previous Wi-Fi credentials are cleared. Re-pair via Smartlife App.

QUICK TIPS

Passage Mode: Use this when hosting events or during the day to allow free entry without scanning credentials each time.

Dual Verify: For high-security locations, enable this so two different credentials must be used together to unlock.

Fingerprint quality: Clean and dry your finger before scanning for best recognition accuracy.

Time Setting: Ensure the time and date are correctly set for accurate access records and time-restricted credentials.

Go back: Press * at any step to return to the previous menu without making changes.