

AVANT GUARD

SMART HOME

D11 Smart Lock

Complete User Settings Guide

HOW TO ENTER SETTINGS MODE

STEP 1 *# B <i>Press *# B on the keypad to begin. "B" activates the settings entry sequence.</i>	STEP 2 Verify Admin <i>Verify Admin identity: scan Password, Card, or Fingerprint.</i>	STEP 3 MENU <i>You are now in Admin Settings Mode. Select a number to navigate.</i>
--	--	---

Registration Notes:

- 1) Fingerprint registration: Scan 5 times
- 2) Password registration: 6 digits
- 3) First time setting: Press *# B then Enter 123456# then Add new admin

MAIN MENU — ADMIN SETTING

KEY	FUNCTION	DESCRIPTION
1	Add User	Register new user with fingerprint, password, or card credentials.
2	Delete User	Remove a user's credentials from the lock.
3	Function Setting	Configure lock functions: Passage, Dual Verify, Anti Burglar Alarm, Mute.
-	Lock Settings (sub-menu)	Contains Function Setting, Volume Setting, Language Setting, and Time Setting.

1 ADD USER — Register New Access

Press 1 from the Admin Setting menu. Choose one of the following credential types to register:

CREDENTIAL	STEPS
------------	-------

Scan Fingerprint 5 Times	Place your finger on the sensor. The lock will prompt you to scan 5 times for high-accuracy registration.
Password (6 Digit)	Enter a 6-digit password on the keypad. Enter it a second time to confirm.
Scan Card	Hold the access card close to the reader area until you hear a confirmation beep.

2 DELETE USER — Remove Access

Press 2 from the Admin Setting menu. Choose the deletion method:

METHOD	STEPS
Direct Scan Fingerprint + Press #	Scan the registered fingerprint, then press # to confirm deletion.
Enter Password + Press #	Type the registered password and press # to confirm deletion.
Scan Card + Press #	Hold the registered card to the reader, then press # to confirm.

LOCK SETTINGS — Configure Your Lock

The Lock Settings sub-menu contains four configurable sections:

Function Setting

KEY	FUNCTION	DESCRIPTION
1	Enable Passage	Turn ON Passage Mode — the lock stays unlocked for free entry.
2	Enable Dual Verify	Require two credentials simultaneously to unlock the door.
3	Disable Anti Burglar Alarm	Turn OFF the anti-burglar alarm (default is ON). Use with caution.
4	Enable Mute	Silence all beeps and voice prompts from the lock.

Volume Setting

KEY	ACTION
5	Volume Up — Increase the lock's audio level
6	Volume Down — Decrease the lock's audio level

Language Setting

KEY	LANGUAGE
1	Chinese
2	English

Time Setting

Set the lock's internal clock. Enter the current date and time when prompted. Accurate time is important for access records and scheduled credentials.

ADD Wi-Fi — Connect to Smartlife App

Press *# B and Verify Admin, then navigate to Add User (option 3) to connect to the Smartlife App. Open the app on your phone, select Add Device, and follow the pairing instructions.

RESET — Factory Reset

Steps:

1. Take out the back cover of the lock.
2. Find the battery compartment — below the battery, press and hold for 5 seconds.
3. Release when you hear the reset confirmation.

Warning: All users and settings will be permanently erased.

QUICK TIPS

Fingerprint registration: Scan 5 times, slightly repositioning your finger each time for the best recognition accuracy.

6-digit password: Always use exactly 6 digits. Avoid simple sequences like 123456 or 000000 for security.

Mute mode: Useful at night — the lock still works but makes no sound.

Dual Verify: For high-security areas, enable dual verify so two different methods must be used to open the door.

Go back: Press * at any time to return to the previous menu without saving changes.