

AVANT GUARD

SMART HOME

MODEL D30 Smart Lock

Complete User Settings Guide

HOW TO ENTER SETTINGS MODE

Press * # + **Admin Password** to enter Admin Setting mode.

MAIN MENU

MENU	FUNCTION
1 Admin Setting	Add Admin, Modify Admin, Delete Admin
2 User Setting	Add User, Modify User, Delete User, Delete All
3 System Setting	Set DateTime, Function Set, Voice Setting, Language
4 Data & Records	Unlock Records, Storage Query

1 ADMIN SETTING

Add Admin

Scan Fingerprint or Scan Card to register a new administrator credential.

Modify Admin

METHOD	STEPS
Fingerprint	Scan fingerprint to modify, then enter new password + #
Card	Scan card to modify, then enter new password + #
By ID	Enter ID to modify + #, then update credential

Delete Admin

METHOD	STEPS
--------	-------

Fingerprint	Scan fingerprint to delete + Enter Password to delete + #
Card	Scan card to delete + Enter Password to delete + #
By ID	Enter ID to delete + #

2 USER SETTING

Add User

Scan Fingerprint, Scan Card, or Enter Password + # to register a regular user.

Modify User

METHOD	STEPS
Scan card to modify	Scan card then enter new password + #
Enter Password to modify	Enter current password + #, then set new credential
Enter ID to modify	Enter user ID + # then update credential

Delete User

SUB-OPTION	METHOD	DETAILS
Delete by ID	Enter ID number	Scan fingerprint / Scan card / Enter Password + #
Delete by Type	Choose type	Delete all Password / Delete all Card / Delete all Fingerprint / Delete all Remote — confirm with # Back / # Confirm

Delete All

Press * Back or # Confirm to delete all users.

3 SYSTEM SETTING

Set DateTime

Enter New Date and Time when prompted. Format: Year / Month / Day / Hour / Minute.

Function Set

OPTION	SETTINGS
Unlock Mode	Single Mode / Double Mode
Passage Mode	Disable / Enable — keeps door unlocked when enabled
Alarm Mode	Enable / Disable — anti-tamper and intrusion alarm

Voice Setting

Enable or Disable voice prompts and sound on the lock.

Language

OPTION	DESCRIPTION
Chinese	Set lock voice prompts to Chinese (Mandarin)
English	Set lock voice prompts to English

4 DATA & RECORDS

OPTION	FUNCTION
Unlock Records	View full log of all access events and unlock history
Storage Query	Admin's Info — view admin credentials stored / User's Info — view regular user credentials stored

HARDWARE RESET & WIFI

ACTION	HOW TO	RESULT
Lock Reset	Open back cover, press and HOLD 6 seconds on reset button	Factory reset — all data cleared
WiFi Setting	Open back cover, press ONCE on reset button	Add device on Smartlife App
WiFi Change	Master Reset	WiFi Setting (First Time) — reconfigure network

QUICK TIPS

Credentials supported: Fingerprint, PIN password, and IC card.

Double Unlock Mode: Requires two credentials to open — adds a second layer of security.

Passage Mode: Enable for open-door periods (events, deliveries). Disable when done to resume auto-lock.

Delete by Type: Removes all credentials of one type (e.g., all cards) without affecting other credential types.

WiFi Setup: Press reset button ONCE (do not hold) to enter WiFi pairing — connect via Smartlife App.

AVANT GUARD SMART HOME | Malaysia | For support, contact your Avant Guard dealer