

AVANT GUARD

SMART HOME

MODEL D31 Smart Lock

Complete User Settings Guide

HOW TO ENTER SETTINGS MODE

Press * # and verify admin info. First time setting: default Admin password is **123456#**.

First time setup: Press * # then enter 123456# to add the first admin. Credentials: Fingerprint (scan 5 times), Password (6-8 digits), or Card.

MAIN MENU

KEY	FUNCTION	DESCRIPTION
1	WL Setting	Wireless module management — Add Module / Delete Module
2	Enter Main Menu	Access Add User, Delete User by ID, and Lock Function settings
3	Add Admin	Register new administrator using Fingerprint/Card/Password#

1 WL SETTING — Wireless Module

OPTION	ACTION
1 Add Module	Pair a new wireless/WiFi module to the lock
2 Delete Module	Remove an existing wireless module from the lock

2 MAIN MENU — User & Lock Functions

Add User

Scan Fingerprint/Card and Enter Password to register a new regular user.

Delete User By ID

Delete by entering the user ID number and scanning Fingerprint/Card/Password + #.

Lock Function

SUB-MENU	OPTION	SETTINGS
1 Function Setting	Enable Passage	Door stays unlocked (passage mode on)
	Enable Dual Verify	Two credentials required to unlock
	Enable Anti Bulgar Alarm	Tamper/intrusion alarm activated
	Enable Mute	Lock operates silently
2 Volume Setting	Volume UP	Increase speaker volume
	Volume DOWN	Decrease speaker volume
3 Language Setting	Chinese	Set voice prompts to Chinese
	English	Set voice prompts to English
4 Time Setting	Set current date and time on the lock	

3 ADD ADMIN

Scan Fingerprint/Card and Enter Password# to register a new administrator.

REGISTRATION NOTES

Fingerprint: Scan 5 times for full registration.

Password: Enter 6-8 digit PIN.

First time setting: Press * # and enter 123456# — this adds the first admin.

QUICK TIPS

Credentials supported: Fingerprint, PIN password, and IC card.

Dual Verify: Enable for high-security areas — requires two separate credentials to open.

Passage Mode: Enable for open-door periods; disable to resume normal auto-lock operation.

Anti-Burglar Alarm: Triggers alert when tamper or forced entry is detected.

Mute Mode: Ideal for late-night use — lock operates without voice or beep sounds.