

AVANT GUARD

SMART HOME

F12 Smart Lock

Complete User Settings Guide

ENTERING ADMIN SETTINGS MODE

STEP 1 Press # <i>Wake keypad</i>	STEP 2 Admin Password <i>Enter the administrator password</i>	AUTHENTICATED Admin Menu <i>Access all admin settings</i>
---	---	---

MAIN MENU OVERVIEW

#	SECTION	DESCRIPTION
1	Admin Setting	Add/delete users and admins; manage lock settings
2	Add WiFi	Connect lock to Smartlife App via WiFi
3	Delete WiFi	Remove WiFi connection from App
4	Factory Reset	Hardware reset using physical reset button

ADMIN SETTING — Add User

METHOD	PROCEDURE
Fingerprint	Scan fingerprint 5 times
Password	Enter 6–10 digit password ending with # (repeat 2 times)
Card	Scan card

ADMIN SETTING — Delete User

METHOD	PROCEDURE
--------	-----------

By ID	Enter ID number to delete, press # to confirm
By Biometric/ Card	Direct scan of user fingerprint / scan user card / enter user password + #

ADMIN SETTING — Lock Setting

SUB-MENU	OPTIONS
Function Setting	1 — Enable Passage / Disable Passage 2 — Enable Dual Verify / Disable Dual Verify 3 — Enable Burglar Alarm / Disable Burglar Alarm 4 — Enable Mute / Disable Mute
Volume Setting	1 — Volume Up 2 — Volume Down
Language Setting	1 — Chinese 2 — English
Time Setting	Enter Year# / Month# / Day# / Hour## / Minute##

ADMIN SETTING — Add Admin

METHOD	PROCEDURE
Fingerprint	Scan fingerprint 5 times
Password	Enter 6–10 digit password ending with # (repeat 2 times)
Card	Scan card

ADD WIFI

STEP	ACTION
Access	Press # + Admin Password
Add User	Add devices from Smartlife Apps

DELETE WIFI

STEP	ACTION
1	Select Lock icon on Apps
2	Click Edit (pencil icon) and remove device → Disconnect

FACTORY RESET

Open battery cover at back panel. Insert safety pin into reset button next to Type C port. Press and HOLD 5 seconds on Reset Button.

IMPORTANT NOTES

Security Notice: In the initial state of the door lock, any fingerprint password can be unlocked. To prevent others from setting the unlocking information by mistake, please add the administrator password and fingerprint in time.

Fingerprint Registration: Scan 5 times for reliable recognition.

Password Registration: Use 6–10 digits, must end with #.