

# AVANT GUARD

## SMART HOME

## G12 Pro Smart Lock

Complete User Settings Guide

### ENTERING ADMIN SETTINGS

STEP 1 — REGISTER ADMIN FIRST

#### Register Admin

After registering admin, scan fingerprint / enter password / scan card to access admin menu

STEP 2 — ENTER ADMIN MENU

#### Admin Verification

Authenticate to unlock full settings access

### MAIN MENU OVERVIEW

| # | SECTION         | DESCRIPTION                                             |
|---|-----------------|---------------------------------------------------------|
| 1 | Admin Setup     | Add Admin, Delete Admin, Factory Reset                  |
| 2 | User Setup      | Add User, Delete User (password, fingerprint, card)     |
| 3 | System Settings | Verification mode, volume, passage mode, function setup |
| 4 | Wireless Setup  | Join network / exit network                             |

### 1 — ADMIN SETUP

| OPTION       | ACTION                           | PROCEDURE                                                                                                                                                                                                                             |
|--------------|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Add Admin    | Add Key                          | Enter your key (Scan fingerprint 6x / Scan Card / Enter 6–8 digit password)<br><i>Note: Don't add password too simple. Please register both front and back fingerprints together. Left and right, for easier to open from inside.</i> |
| Delete Admin | Delete Password                  | Delete One (Enter ID number#)   Delete All (Clear#)                                                                                                                                                                                   |
|              | Delete Fingerprint / Delete Card | Delete One (Enter ID number#)   Delete All (Clear#)                                                                                                                                                                                   |
|              | Confirm                          | Press # to confirm   Press * to cancel                                                                                                                                                                                                |

|               |  |  |
|---------------|--|--|
| Factory Reset |  |  |
|---------------|--|--|

## 2 — USER SETUP

| OPTION      | ACTION             | PROCEDURE                                                                                                                                                                     |
|-------------|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Add User    | Add Key            | Enter your key (Scan fingerprint 6x / Scan Card / Enter 6–8 digit password)<br><i>Note: Register both front and back fingerprints. Left and right for easy inside access.</i> |
| Delete User | Delete Password    | Delete One (Enter ID#)   Delete All (Clear#)                                                                                                                                  |
|             | Delete Fingerprint | Delete One (Enter ID#)   Delete All (Clear#)                                                                                                                                  |
|             | Delete Card        | Delete One (Enter ID#)   Delete All (Clear#)                                                                                                                                  |

## 3 — SYSTEM SETTINGS

| SETTING                             | OPTIONS                                                 |
|-------------------------------------|---------------------------------------------------------|
| <b>Verification Mode Setup</b>      | 1 — Single Unlock<br>2 — Combination Unlock<br>1 return |
| <b>Volume Adjustment</b>            | 1 — Low Volume<br>2 — Medium Volume<br>3 — High Volume  |
| <b>Normally Open Mode (Passage)</b> | Turn On<br>Turn Off                                     |
| <b>Function Setup</b>               | Press 2 for Anti-Pry Alarm Press to Go / Off            |

## 4 — WIRELESS SETUP

| OPTION                          | ACTION                                   |
|---------------------------------|------------------------------------------|
| Join Network — Entering Network | Connect lock to WiFi / Smartlife network |
| Exit Network                    | Disconnect lock from network             |

## IMPORTANT NOTES

**Security Notice:** In the initial state of the door lock, any fingerprint password can be unlocked. To prevent others from setting the unlocking information by mistake, please add the administrator password and fingerprint in time.

**G12 Pro Key Tip:** Register fingerprints for both front and back of fingers (left and right) together. This makes it much easier to unlock from the inside and improves recognition reliability.

**Password Complexity:** Do not use a simple password. Use 6–8 digits with varied combinations.