

# AVANT GUARD

## SMART HOME

## MODEL G12 Smart Lock

Complete User Settings Guide

### HOW TO ENTER SETTINGS MODE

Press **# + Admin Password** to enter Admin Setting mode.

**Security Note:** In the initial state of the door lock, any fingerprint password can be unlocked. To prevent unauthorized access, please add the administrator password and fingerprint immediately after setup.

### MAIN MENU

| FUNCTION      | DESCRIPTION                                          |
|---------------|------------------------------------------------------|
| Add User      | Register new user via fingerprint, password, or card |
| Delete User   | Remove a user by ID or by scanning credentials       |
| Lock Setting  | Function, Volume, Language, and Time settings        |
| Add Admin     | Register a new administrator credential              |
| Add WiFi      | Connect lock to Smartlife App                        |
| Delete WiFi   | Disconnect lock from app                             |
| Factory Reset | Reset lock to factory defaults                       |

### ADD USER

| CREDENTIAL  | STEPS                                                    |
|-------------|----------------------------------------------------------|
| Fingerprint | Scan fingerprint 5 times until confirmed                 |
| Password    | Enter 6-10 digit password ending with # (repeat 2 times) |
| Card        | Scan IC card on the reader                               |

## DELETE USER

| METHOD       | STEPS                                                                  |
|--------------|------------------------------------------------------------------------|
| By ID Number | Enter user ID number, press # to confirm deletion                      |
| Direct Scan  | Scan user's fingerprint / Scan user's card / Enter user's password + # |

## LOCK SETTING

### 1 Function Setting

| OPTION                         | VALUES                                    |
|--------------------------------|-------------------------------------------|
| Enable / Disable Passage       | Passage mode on/off — keeps door unlocked |
| Enable / Disable Dual Verify   | Require two credentials to unlock         |
| Enable / Disable Bulglar Alarm | Anti-tamper/burglar alarm on/off          |
| Enable / Disable Mute          | Silent operation on/off                   |

### 2 Volume Setting

| OPTION      | ACTION                            |
|-------------|-----------------------------------|
| Volume Up   | Increase speaker volume one level |
| Volume Down | Decrease speaker volume one level |

### 3 Language Setting

| OPTION  | LANGUAGE                            |
|---------|-------------------------------------|
| Chinese | Voice prompts in Chinese (Mandarin) |
| English | Voice prompts in English            |

### 4 Time Setting

Enter Year# / Month# / Day# / Hour: / Minute# to set the current date and time.

## ADD ADMIN

Scan Fingerprint 5 times, or Enter Password 6-10 digits ending with # (repeat 2 times), or Scan Card.

## WIFI MANAGEMENT

| ACTION | HOW TO |
|--------|--------|
|--------|--------|

|             |                                                                                  |
|-------------|----------------------------------------------------------------------------------|
| Add WiFi    | Press # + Admin Password, then select Add WiFi — Add Devices from Smartlife Apps |
| Delete WiFi | Select Lock Icon on Apps, Click Edit and remove device — Disconnect              |

## FACTORY RESET

Open battery cover at back panel. Insert safety pin into reset button next to Type C port. Press and HOLD 5 seconds on Reset Button to complete factory reset.

## QUICK TIPS

**Credentials supported:** Fingerprint (5 scans), Password (6-10 digits), IC Card.

**Dual Verify:** Requires two separate credentials to open — ideal for high security rooms.

**Passage Mode:** Keeps door unlocked until manually disabled — use for open-door events.

**Add admin immediately:** In factory state, any fingerprint can unlock the door. Add an admin credential right away to secure the lock.