

AVANT GUARD

SMART HOME

MODEL G40 Smart Lock

Complete User Settings Guide

HOW TO ENTER SETTINGS MODE

Please touch to wake up the screen and then press #. Then enter administrative verification to access settings.

Security Note: In the initial state of the door lock, any fingerprint password can be unlocked. Add the administrator password and fingerprint immediately to secure the lock.

MAIN MENU

MENU	FUNCTION
1 User Management	Add Users, Delete User, Clear User, Record Query
2 System Settings	Set parameters, Adjust volume, Switch wireless device, Adjust time
3 Chinese-English Switching	Change language between Chinese and English

1 USER MANAGEMENT

1 Add Users

USER TYPE	CREDENTIALS REQUIRED
1 Add an administrative user	Enter the password, fingerprint, card, or wireless device
2 Add a normal user	Enter the password, fingerprint, card, or wireless device

2 Delete User

Enter password, fingerprint, card, wireless device, or its ID number to identify and delete the user.

3 Clear User

Enter administrator verification to clear all users from the lock.

4 Record Query

Input # to turn backwards through records, input * to turn forward through access history.

2 SYSTEM SETTINGS

1 Set Parameters

OPTION	VALUES
Set the lock mode	1 Set the automatic lock / 2 Set the manual lock
Set the unlocking hold time	Enter the unlocking hold time (00-99 seconds)

2 Adjust the Volume

OPTION	ACTION
1 Increase the volume	Raises speaker volume one level
2 Decrease the volume	Lowers speaker volume one level

3 Switch Wireless Device

OPTION	NOTE
Turn on the wireless device	In the power-on state, press and hold the initialization button, and release it after the voice prompt "Clear successfully"
Turn off the wireless device (remote control cannot be used)	Disables wireless/remote control functionality

4 Adjust Time

Set current date and time on the lock.

3 LANGUAGE SWITCHING

OPTION	LANGUAGE
1 Chinese	Voice prompts in Chinese (Mandarin)
2 English	Voice prompts in English

QUICK TIPS

Credentials supported: Password, Fingerprint, IC Card, and Wireless device (remote).

Unlock hold time: Set 00-99 seconds — how long the door latch stays open after unlocking.

Automatic vs Manual lock: Automatic lock re-locks after a set time; manual lock stays open until you physically lock it.

Add admin first: In factory state any fingerprint opens the door — register an admin credential immediately.