

AVANT GUARD

SMART HOME

MODEL P12 Smart Lock

Complete User Settings Guide

HOW TO ENTER SETTINGS MODE

Press * # + **Admin Password** to enter Admin Setting mode.

MAIN MENU

MENU	FUNCTION
Admin Setting	Add User, Delete User, System Setting, Install Setting
Add WiFi	Press 1 + # and Admin Password — Connect App (EZ mode)
Delete WiFi	Select Lock icon on App, Click Edit and remove device
Factory Reset	Press * # + Admin Password → Factory Reset → * NO or # YES. Use pin to long-press between OPEN/CLOSE button.

ADD USER

OPTION	STEPS
Add Admin — Press 00 + #	Scan fingerprint 5 times or Scan Card
Add User — Start from 01 + # (Exp: 024/034)	Scan fingerprint 5 times or Scan Card or Enter Password + # (2 times)

DELETE USER

Delete by ID: Enter user ID (Exp: 19#). Enter YY/MM/OD HB/MIN for time-based deletion.

SYSTEM SETTING

SUB-OPTION	SETTING	VALUES
------------	---------	--------

1 Volume Setting	Speaker volume	Volume + / Volume -
2 Verify Mode	Authentication mode	1 Single Verify / 2 Double Verify
3 Language	Voice language	1 Chinese / 2 English

INSTALL SETTING

SUB-OPTION	SETTING	VALUES
1 Door Direction	Hinge side	1 Left / 2 Right / 3 Push / 4 Not Push
2 Lock Type	Latch type	Not Push
3 Auto Lock	Auto-lock after close	Enable / Disable
4 Threshold	Sensitivity	Enter between 3-20s + #
Record	Access log	View access history
Factory Reset	Full reset	* NO or # YES

QUICK TIPS

Credentials supported: Fingerprint (5 scans), IC Card, Password.

Double Verify: Requires two credentials to unlock — use for enhanced security.

WiFi — EZ Mode: Press 1 + # + Admin Password then connect via Smartlife App in EZ mode.

Door Direction: Configure Left/Right/Push under Install Setting to match your door's hinge position.