

AVANT GUARD

SMART HOME

MODEL S11 Metallic Smart Lock

Complete User Settings Guide

HOW TO ENTER SETTINGS MODE

Press * # to enter Admin Menu. First time setting: default Admin password is **123456#**.

Notes: 1) Fingerprint registration: Scan 5 times. 2) Password registration: 6-8 digits. 3) First time setting: Press * # → Enter 123456# → Add new admin.

MAIN MENU

MENU	FUNCTION
1 Admin Setup	Add Admin, Delete Admin, Factory Reset
2 User Setup	Add Regular User, Delete Regular User
3 System Setup	Verification Mode, Volume Adjustment, Normally Open Mode, Door Lock Function Setting
4 Wireless Setup	Join Network, Exit Network

1 ADMIN SETUP

Add Admin

OPTION	STEPS
1 Add Key	Enter your key: Scan fingerprint/card, enter 6-8 digit password

Delete Admin

OPTION	ACTION
1 Delete Password	Press # to confirm, * to back — once confirmed, clears all passwords

2 Delete Fingerprint	Press # to confirm, * to back — once confirmed, clears all fingerprints
3 Delete Card	Press # to confirm, * to back — once confirmed, clears all cards

Factory Reset

Open battery cover at back. Long press small button at back to factory reset.

2 USER SETUP

Add Regular User

Enter your key: Scan fingerprint/card, enter 6-8 digit password.

Delete Regular User

OPTION	ACTION
1 Delete Password	Press # to confirm, * to back
2 Delete Fingerprint	Press # to confirm, * to back
3 Delete Card	Press # to confirm, * to back

3 SYSTEM SETUP

1 Verification Mode Setup

OPTION	DESCRIPTION
Press 2 for Single Unlocking Mode	One credential sufficient to open
Combination Mode	Two credentials required to open

2 Volume Adjustment

OPTION	LEVEL
1 Low Volume	Quiet operation
2 Medium Volume	Standard level
3 High Volume	Loud — for noisy environments

3 Normally Open Mode (Passage)

OPTION	ACTION
Turn On	Enable passage mode — door stays unlocked
Turn Off	Disable passage mode — normal auto-lock resumes

4 Door Lock Function Setting

Press 2 to On/Off Anti-Prying Detection — enables tamper alert when door is forced.

4 WIRELESS SETUP

OPTION	ACTION
1 Join Network	Connect the lock to WiFi/app network
2 Exit Network	Disconnect from current network

QUICK TIPS

Credentials supported: Fingerprint (5 scans), Password (6-8 digits), IC Card.

Anti-Prying Detection: Enable under Door Lock Function Setting to alert when tamper or forced entry is detected.

Verification Mode: Set Combination mode for areas requiring two credentials to open.

Volume levels: Low, Medium, High — choose based on environment noise levels.