

AVANT GUARD

SMART HOME

S11 Smart Lock

Complete User Settings Guide

SETTINGS MODE ENTRY

STEP 1 * * <i>Press * * on keypad</i>	STEP 2 # <i>Press # key</i>	STEP 3 Admin PW <i>Enter Admin Password to access settings</i>
---	---	---

MAIN MENU OVERVIEW

#	Menu Item	Description
1	Add User	Enroll fingerprint or card for new users
2	Delete User	Remove fingerprint, card, or by password/ID
3	Lock Setting	Function, Volume, Language, and Time settings
4	Add Admin	Register new administrator credentials

1. ADD USER

Step	Action
1	Scan Fingerprint — 3 times
2	Scan Card
3	Enter Password + "#", then repeat again to confirm

2. DELETE USER

Method	Action
--------	--------

By Fingerprint	Scan fingerprint to delete
By Card	Scan card to delete
By Password	Enter Password to delete + "#"
By ID	Enter ID to delete + "#"

3. LOCK SETTING

#	Sub-Menu	Options
1	Function Settings	Enable/Disable Passage Mode Enable/Disable Dual Verify Enable/Disable Anti Burglar Alarm Enable/Disable Mute
2	Volume Settings	Volume Up / Volume Down
3	Language Settings	Chinese / English
4	Time Setting	Enter New Date and Time

4. ADD ADMIN

Step	Action
1	Scan Fingerprint — 3 times
2	Scan Card
3	Enter Password + "#", then repeat again to confirm

LOCK RESET & WIFI SETTINGS

Action	Steps	Result
Lock Reset	Open back cover → Press and HOLD 6 seconds on reset button	Successful reset
WiFi Setting	Open back cover → Press ONCE on reset button	Add Device on Smartlife App
WiFi Change	Perform Master Reset → WiFi Setting (First Time)	Re-pair with Smartlife App

QUICK TIPS

Tip: Always register fingerprint 3 times for optimal recognition accuracy.

Tip: Passage Mode allows the door to remain unlocked — disable when not in use for security.

Tip: Anti Burglar Alarm triggers an alert if the door is forced open.

Tip: For WiFi re-pairing, always perform a master reset first before running WiFi Setting again.