

AVANT GUARD

SMART HOME

S30 Smart Lock

Complete User Settings Guide

SETTINGS MODE ENTRY

STEP 1

*** #**

Press * # to enter settings

STEP 2

Admin PW

Verify admin info — then Enter main menu

Important Notes:

- 1) Fingerprint registration — Scan 5 Times
- 2) Password registration — 6-8 digits
- 3) First time setting — Press * # → Enter 123456# → Add new admin

MAIN MENU OVERVIEW

#	Menu Item	Description
1	New User	Register new user with fingerprint, card, or password
2	Delete User	Remove user by ID
3	System Setting	Time, Volume, Verify Mode, Language
4	Install Set	Direction, Lock Type, Auto Lock, Threshold
5	Record Query	View access logs
6	Factory Reset	YES or NO confirmation

1. NEW USER

Step	Action	Details
1	Enter Your User ID #	Assign a unique user ID
2	Register Key	Fingerprint / Card / Password# — scan or enter accordingly

3	Enroll Face	Face enrollment option
---	-------------	------------------------

2. DELETE USER

Step	Action
1	Enter User ID #
2	Confirm deletion

3. SYSTEM SETTING

Setting	Options
Time Setting	Enter Date (date format)
Volume Adjustment	Volume + / Volume -
Verify Mode	Single Verify / Double Verify
Language Setting	Chinese / English

4. INSTALL SET

Setting	Options
Direction	Set Left / Set Right
Lock Type	Not Push / Push
Auto Lock	Autolock ON / Autolock OFF
Threshold	Lock between 3-30 (adjustable threshold)

5. RECORD QUERY & FACTORY RESET

Option	Action
Record Query	Browse access history logs
Factory Reset	Select YES or NO to confirm reset

QUICK TIPS

First-Time Setup: Press * # → Enter default password 123456# → Add new admin credentials.

Fingerprint: Scan 5 times during registration for reliable recognition.

Password: Must be 6-8 digits in length.

Double Verify: Requires two authentication methods (e.g., fingerprint + card) for added security.

Autolock: Enable to automatically lock the door after each opening.