

AVANT GUARD

SMART HOME

S32 Smart Lock

Complete User Settings Guide

SETTINGS MODE ENTRY

STEP 1

*** #**

Press * # and verify admin info

NOTE

Admin PW

At initialization, any first info you enter (Password/Fingerprint/Card) will be set as Admin

Important Notes:

- 1) Fingerprint registration — Scan 5 Times
- 2) Password registration — 6-8 digits
- 3) First time setting — At initialization, first enrolled credential becomes Admin

MAIN MENU OVERVIEW

#	Menu Item	Description
1	Add User	Add Admin and regular Users with multiple auth methods
2	Delete User	Verify delete, Delete by ID, or Datetime setting
3	System Setting	Install Setting, Face Set, Function Setting, Factory Reset
4	System Query	User Count, Record Inquiry

1. ADD USER

Category	Steps
Add Admin	Enter unlock information → Scan palm vein / face / fingerprint 3 times / add 6-8 digit password / scan card
Add User	Enter unlock information → Scan palm vein / face / fingerprint 3 times / add 6-8 digit password / scan card

2. DELETE USER

Method	Details
Verify Delete	Enter user info to delete — direct scan (Palm, Face, Fingerprint, Card) or enter password to delete
Delete by ID	Enter user ID to delete (e.g., 001#)
Datetime Setting	Year/Month/Day Hour:Minute — set scheduled delete time

3. SYSTEM SETTING

Category	Setting	Options
Install Setting — Lock Set	Direction	Right / Left
	Delay Lock	Off / 10 / 15 / 20 / 25
	Tamper Alarm	Enable / Disable
	Motor Torque	High / Medium / Low
	Lock Back Time	2-9 Seconds
	Dwell Alert	Disable / 5 / 20 / 25
Face Set	Auto Detect	Disable / Smart Mode
	Detection Distance	Near / Medium / Far
Face Set — Prompt	Recognition Prompt	Enable / Disable
Function Setting	Network Setting	Network configuration
Function Setting	Volume Setting	Mute / Low / Medium / High
Function Setting	Disable Authentication	Enable / Disable
Factory Reset	Confirmation	* to back / # to confirm

4. SYSTEM QUERY

Option	Details
User Count	View total number of registered users
Record Inquiry — Query by Order	2 back / 8 next — browse records sequentially
Record Inquiry — Query by Time	Enter Date Time to search records

QUICK TIPS

First Enrollment: The very first credential registered on the S32 automatically becomes the Admin — choose this carefully.

Dwell Alert: Triggers alarm if the door stays open longer than the configured duration.

Motor Torque: Adjust to High for heavy doors; Low for lightweight doors to preserve battery life.

Recognition Prompt: Enable to receive audio/visual feedback during face recognition.

Datetime Delete: Schedule user credential expiry by setting a deletion datetime — useful for temporary access.