

AVANT GUARD

SMART HOME

MODEL S40 Smart Lock

Complete User Settings Guide

HOW TO ENTER SETTINGS MODE

Press * # + **Admin Password** to enter Admin Setting mode.

MAIN MENU — ADMIN SETTING

MENU	FUNCTION
Add User	Add Admin, Add User — with multiple credential options
Delete User	Verify Delete, Delete by ID
System Setting	Set Datetime, Install Set, Function Set, Language & Log
Add WiFi	Press * # + Admin Password — System Setting > Function Set > Network Config — Connect App (EZ mode)
Delete WiFi	Select Lock icon on Apps, Click Edit and remove device — Disconnect
Factory Reset	Press * # + Admin Password — System Setting > Restore

ADD USER

USER TYPE	CREDENTIALS SUPPORTED
Add Admin	Scan Fingerprint 5x / Enter Password + # (2 times) / Scan Card / Scan Face (look at camera, move Up/Down/Left/Right)
Add User	Scan Fingerprint 5x / Enter Password + # (2 times) / Scan Card / Scan Face

DELETE USER

METHOD	STEPS
--------	-------

Verify Delete	Scan fingerprint/card to identify user, then confirm deletion
Delete by ID	Enter user ID to delete + Enter password + # (2 times) / Scan Card

SYSTEM SETTING

Set Datetime

Enter YYYY/MM/DD HH:MM to set current date and time.

Install Set

OPTION	VALUES
Lock Direction	Left / Right
Lock Close Duration	Off / 10s / 20s / 30s
Door Set — Ply Alarm	On/Off — anti-pry alert
Door Set — Torque	Low/Medium/High
Door Set — Auto Lock	On/Off (2-9 sec)
Door Set — Sensor	On/Off

Function Set

OPTION	VALUES
Network Config	Connect App (EZ Mode) — WiFi pairing
Double Auth Set	* YES or # NO — require two credentials

Language & Log

Scan Fingerprint 4 times, Enter Password + # (2 times), or Scan Card to access language and log settings.

WIFI MANAGEMENT

ACTION	HOW TO
Add WiFi	Admin Setting > System Setting > Function Set > Network Config — EZ Mode in Smartlife App
Delete WiFi	Select lock icon on app, tap Edit, remove device

QUICK TIPS

Credentials supported: Fingerprint (5 scans), Face Recognition, Password, IC Card.

Face enrollment: Look at camera, move head Up/Down/Left/Right during enrollment — hold still for confirmation beep.

Double Auth: Enable in Function Set for two-credential unlock — maximum security.

Torque setting: Adjust High/Medium/Low to match your door's mechanical resistance for smooth operation.

Door Sensor: Enable to detect if door is physically open or closed — triggers alerts if left open.